


## Vents, Heating, and A/C

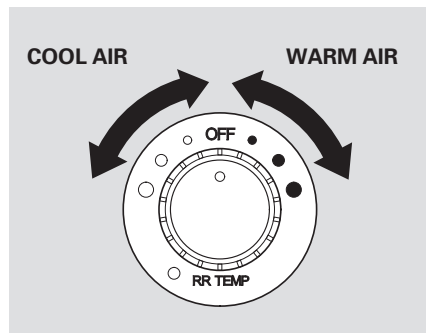


**OFF (center)** — The rear A/C unit shuts off.

**Cool Air** — Turn this dial counterclockwise to increase the temperature.

**Warm Air** — Turn this dial clockwise to increase the temperature.

### Sunlight and Temperature Sensors

*On EX and EX-L models*

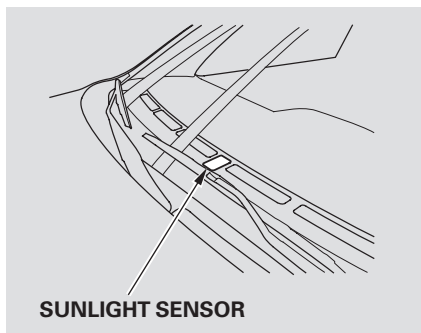

The climate control system has two sensors. A sunlight sensor is in the top of the dashboard, and a temperature sensor is next to the steering column. Do not cover the sensors or spill any liquid on them.

